 
 
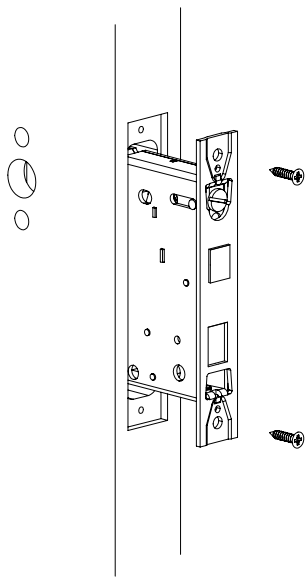 


1. Install Lockbox

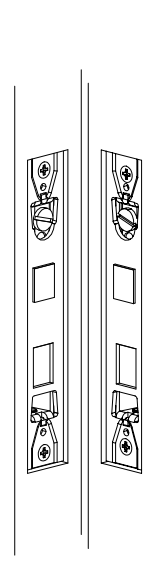

 
See Template
for door prep

2. Install Trims

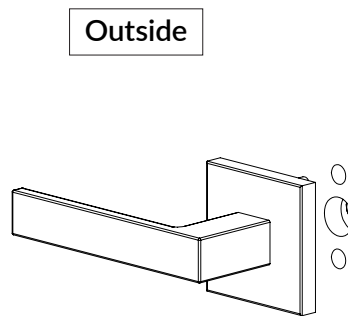


Trims Vary
Lever shown


Inside

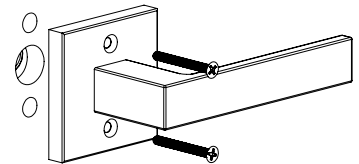

 3. Install Faceplate

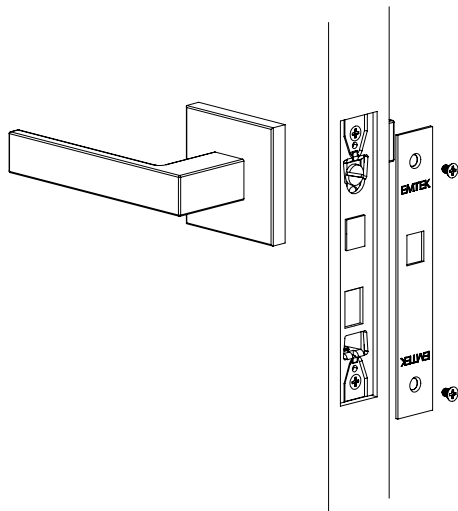

 
4. Install Strike Plate & Magnetic Box

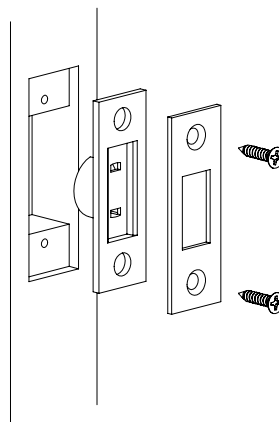


See Template
for prep

Instruction to reverse Handing

 Remove shoulder screw

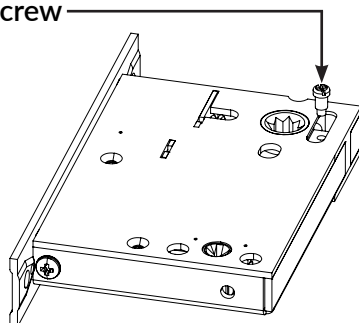


 Install screw on opposite
side of lock box

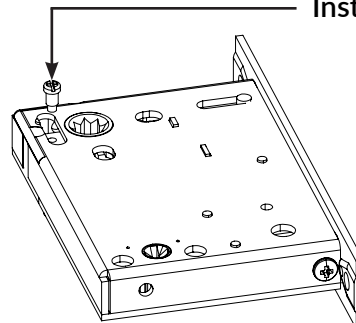


Handing can be changed to LH or RH so that the door is unlocked automatically when engaging the lever or knob from the inside. Shoulder screw should be on interior side when lock box is installed.

 1. Install Lockbox

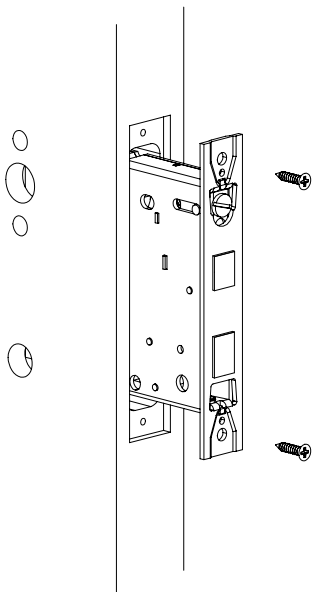


See Template
for door prep

 2. Install Trims

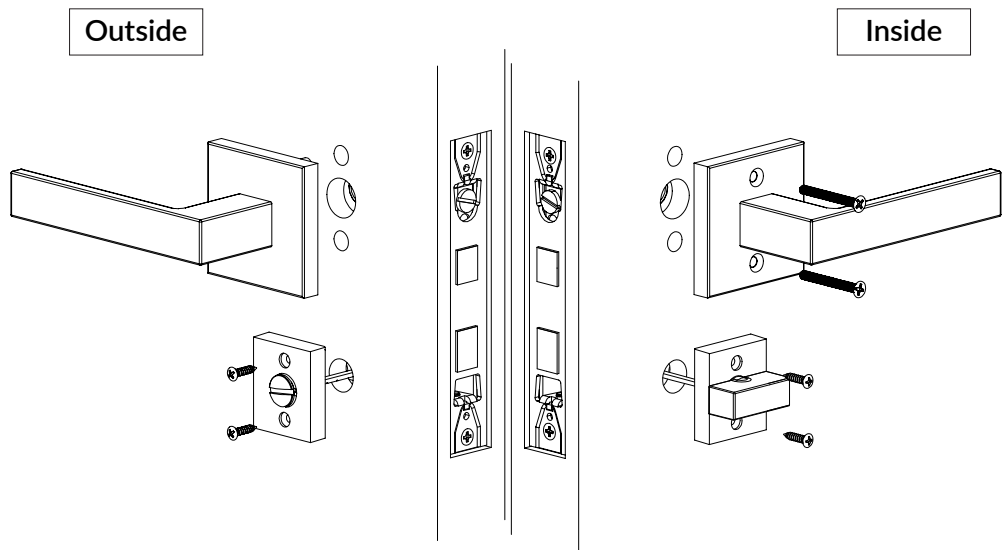


Trims Vary
Lever with privacy bolt shown

 3. Install Faceplate

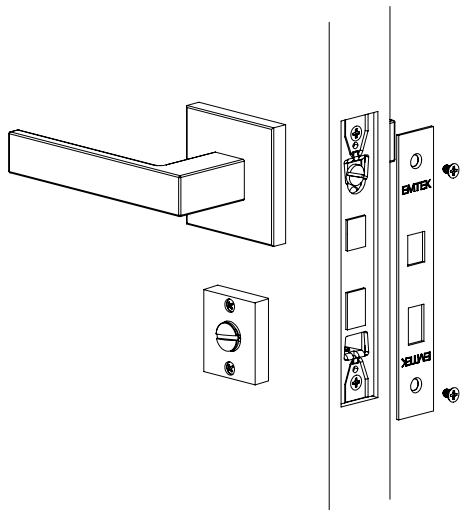

 
4. Install Strike Plate & Magnetic Box

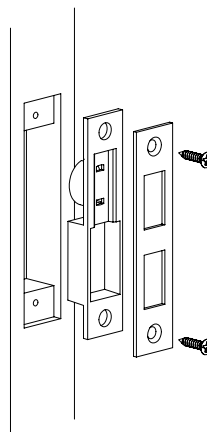


See Template
for prep

Instruction to reverse Handing

 Remove shoulder screw

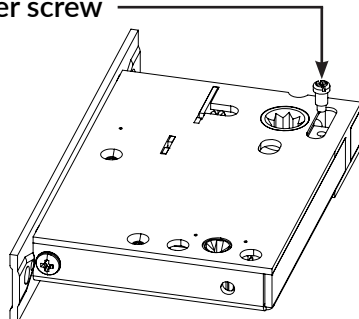

 Install screw on opposite
side of lock box

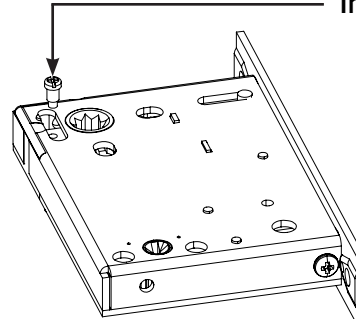

Handing can be changed to LH or RH so that the door is unlocked automatically when engaging the lever or knob from the inside. Shoulder screw should be on interior side when lock box is installed.