


INSTALLATION INSTRUCTION | TOILET
FLOAT BTW WC NORIM

Mariolli

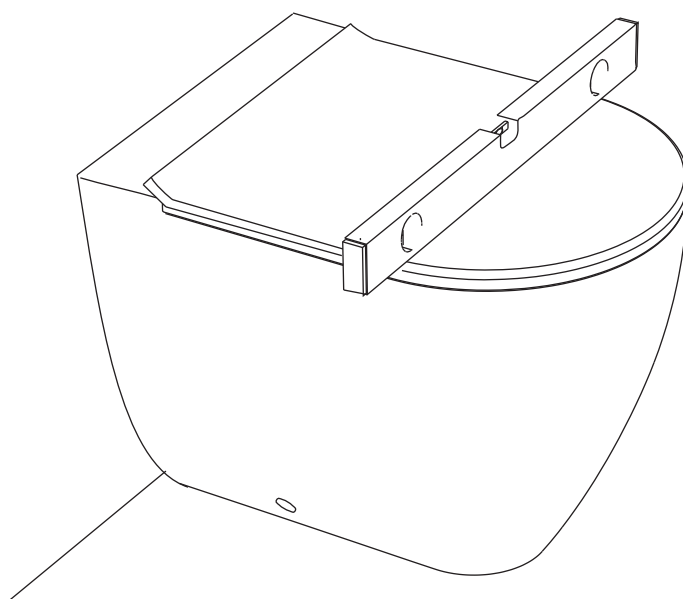

HINTEX

Tel: +1 (844) 404-0440 Email: info@hintex.com
Website: www.hintex.com

FLOAT BTW WC NORIM

20,1"x16,7"x14,4"

Mariolli


NOTE: All measurements for roughing in should be taken from finished wall/floor.

Dimensions shown are nominal measurements only.


1. Rough in positions of water inlet and waste outlet.
2. Mark out and drill floor fixing brackets into position (3,5" apart, 7,9" from finished wall) and mark out and prepare plate, rod and plastic bend if installing the waste into the floor via a pan collar.
3. Fix the pan bend connector back to the wall using the rod and bracket.
4. Align and push pan back to wall, connecting pan spigot into waste bend and pan inlet into flush pipe and keeseal.
5. Check pan is level
6. Fix pan by using the fixing screws through the fixing holes into the floor fixing brackets.
7. Flush pan to check connections for leaks.
8. Apply flexible sealant around base and rear of pan to seal to wall and floor.

IMPORTANT: It is highly recommended to set the in wall cistern at 4,5 liters, since a greater water flow rate and the excessive pressure in general can cause problems of splashing, in case solvable by installing the supplied water pressure reducer. We kindly suggest not to use this wc with low installation cisterns not able to grant a stable performance.


S-Trap setup

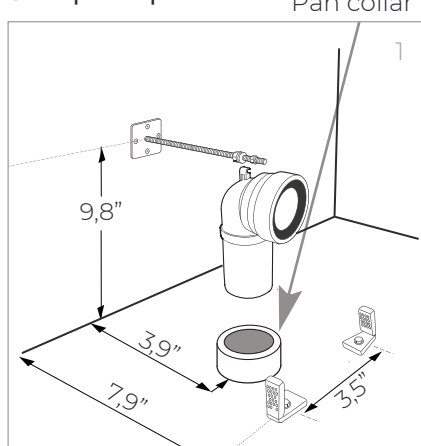


P-Trap setup

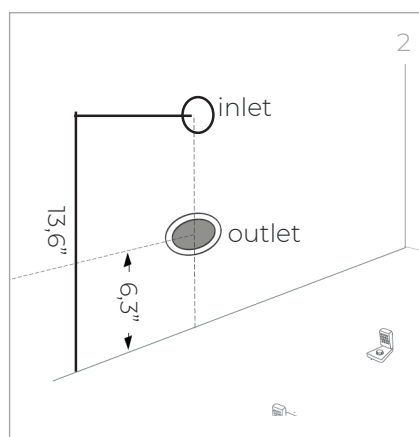

Levelling

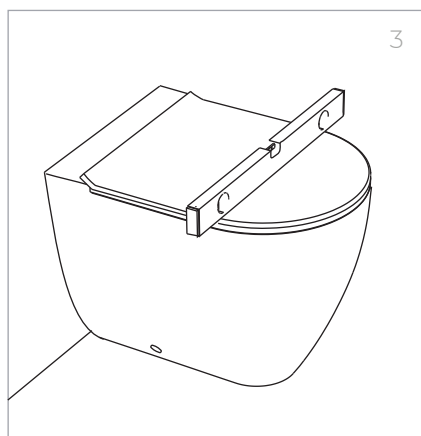

Fixing

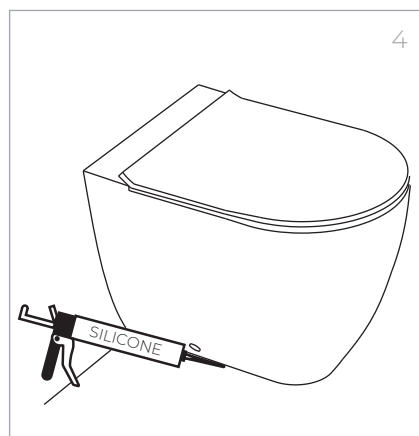

Plumbers, please ensure a copy of the installation instructions is left with the end user for future reference.